

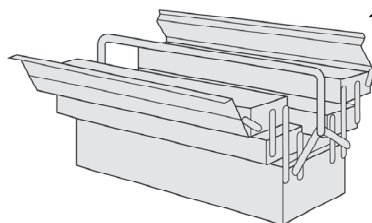
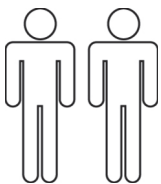


Aufbauanleitung Massivholzbett "Belvedere"
Instructions de montage lit en bois massif « Belvedere »
Montagehandleiding massief houten bed "Belvedere"



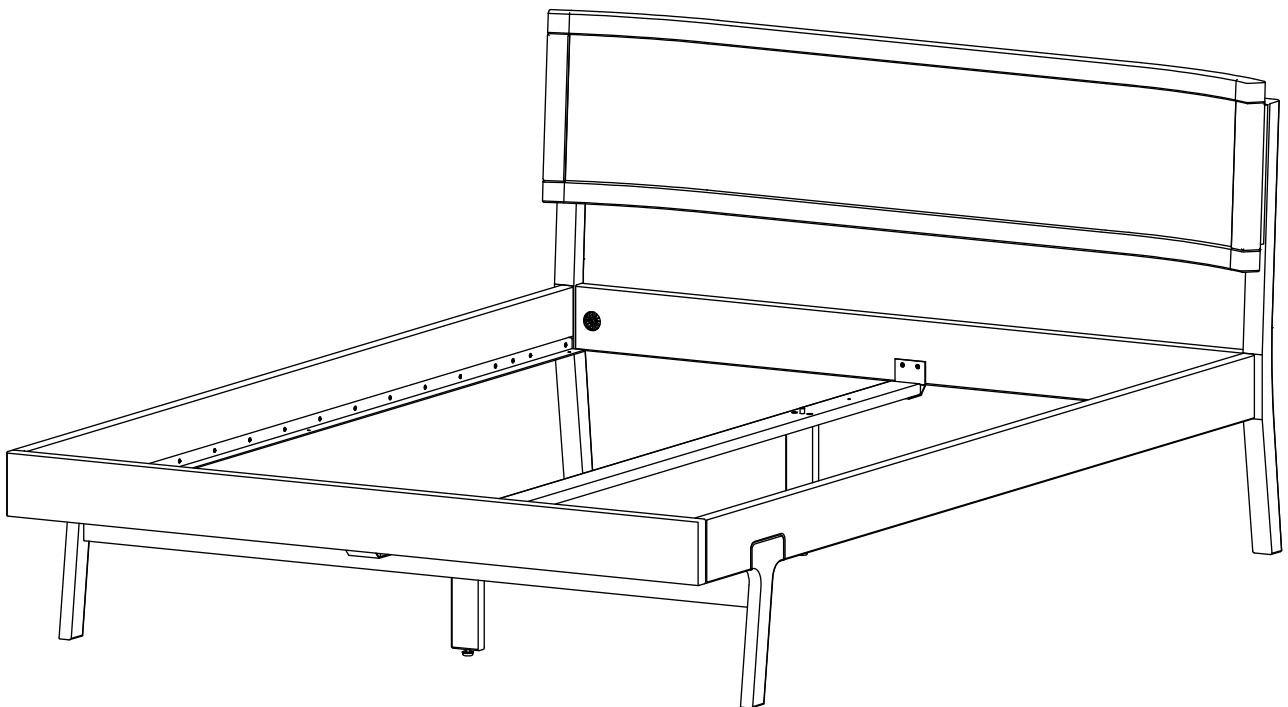


Service • Assistenza • Dienstverlening • Serwis • Servis • Szerviz • Сервисная служба

Name • Nom • Nome • Naam •
Nazwa • Jméno • Názov • Név •
Denumire • Ísm • Название

Nr. • No. • N° • Номер • Č • Sz

Typ • Type • Tip • Típus • Тиро • Тип

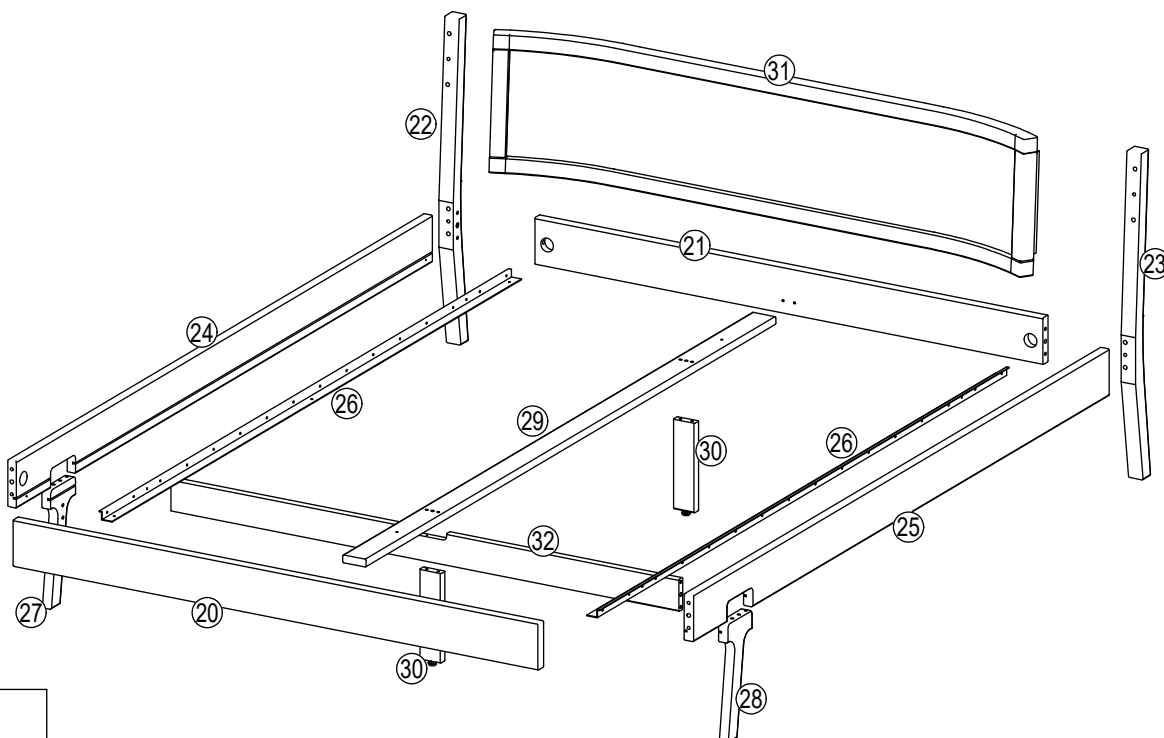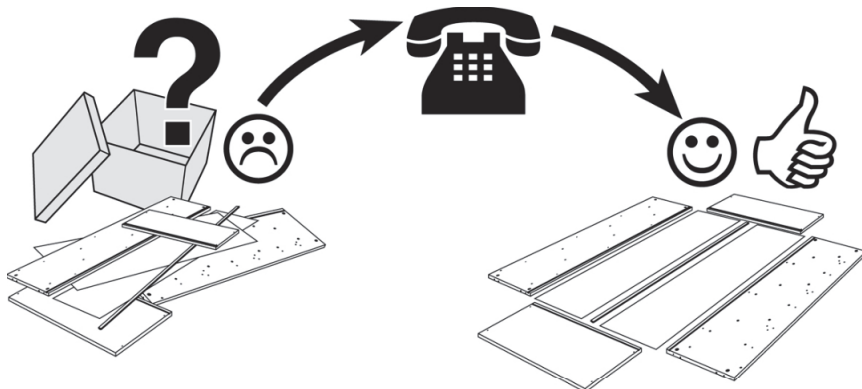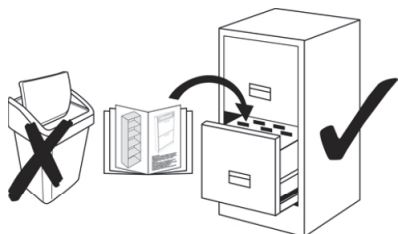

A24




18 x
ø8 x 30mm

A28



4 x
ø8 x 50mm

B50




6 x
ø35 x 19mm

B52



2 x
M6, ø8,4 x 55mm

B54



4 x
M6, ø8,4 x 35mm

D11




44 x
ø3,5 x 15mm

D35




1 x
ø4 x 35mm

K07




4 x
ø7 x 50mm

K11




2 x
ø7 x 70mm

L87




4 x
M8 x 50mm

L89



4 x
M8 x 60mm

V10



2 x

Z04



1 x
4mm

Z05





1 x
5mm

Z06





1 x
6mm

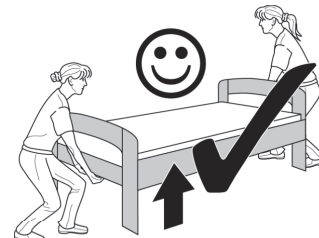


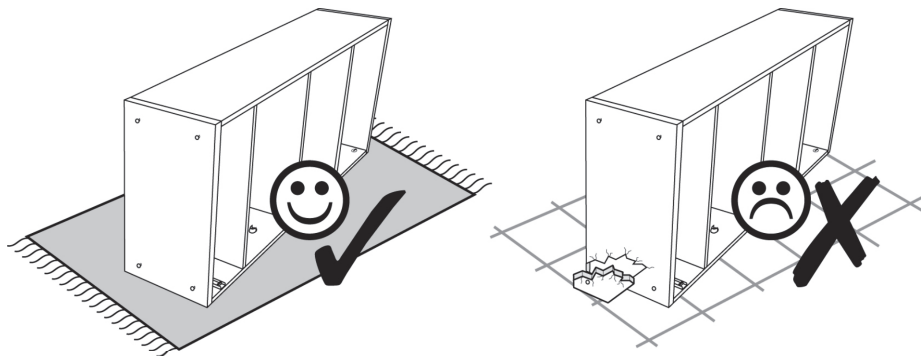


1



A24  16 x ø8 x 30mm	A28  4 x ø8 x 50mm	B50  6 x ø35 x 19mm	B52  2 x M6, ø8,4 x 55mm	B54  4 x M6, ø8,4 x 35mm
--	---	--	---	---

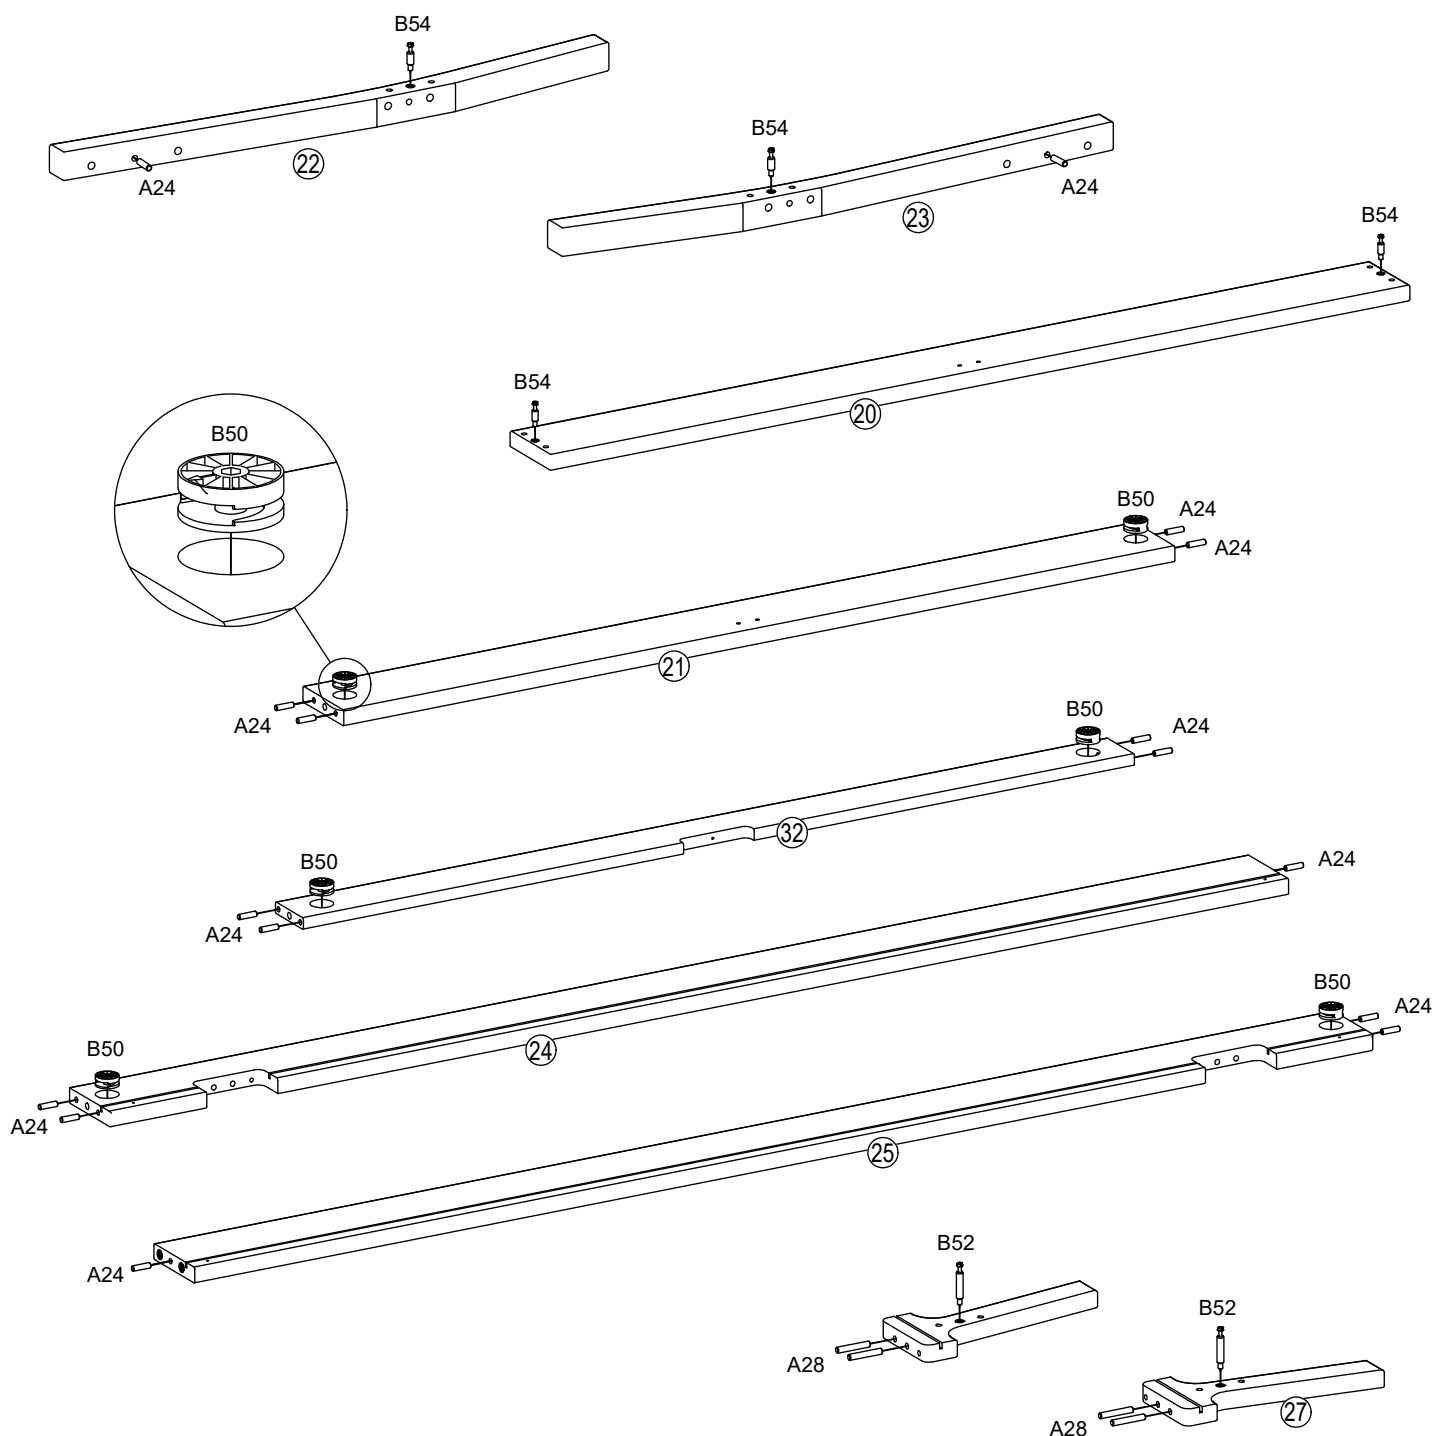




2

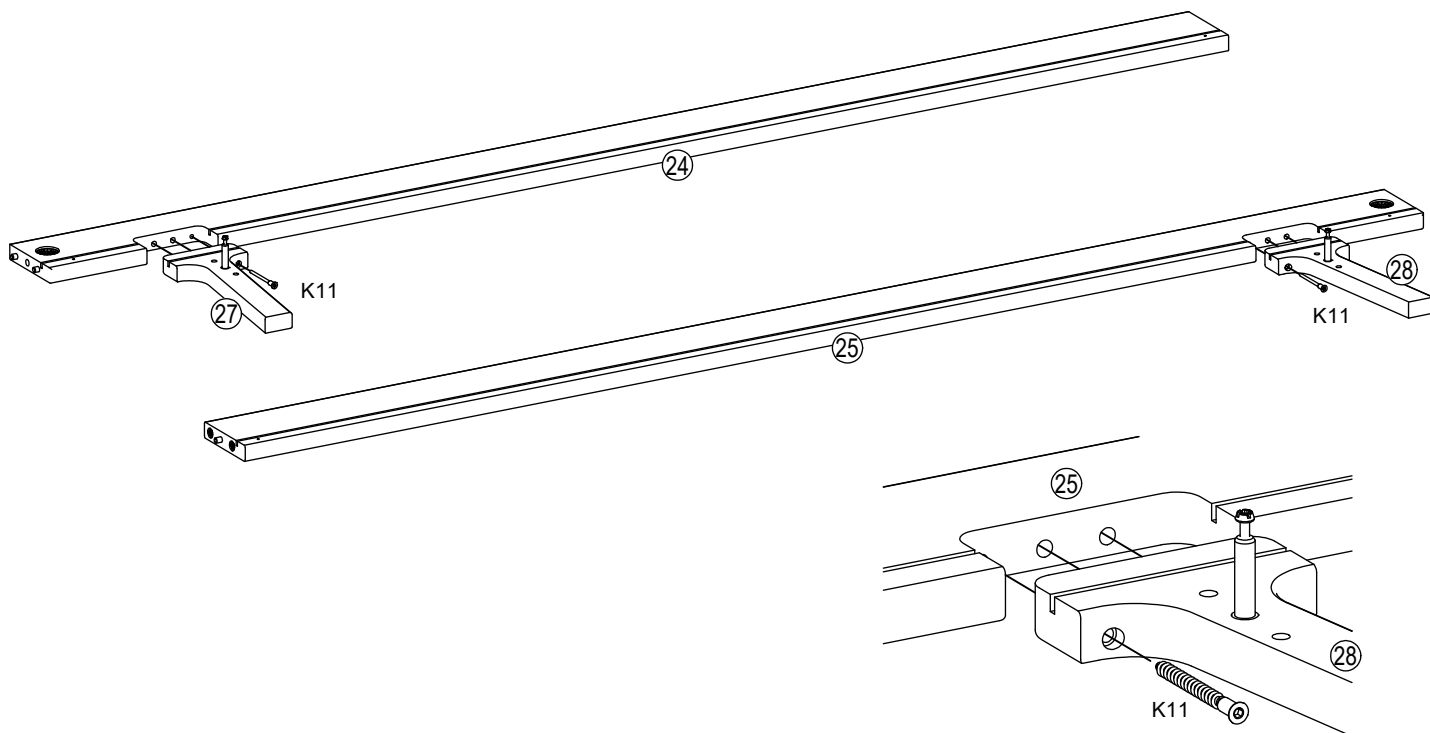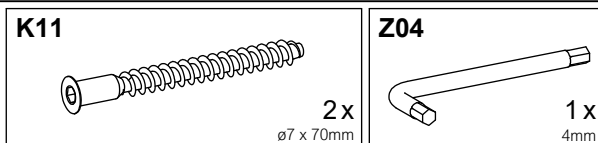




3

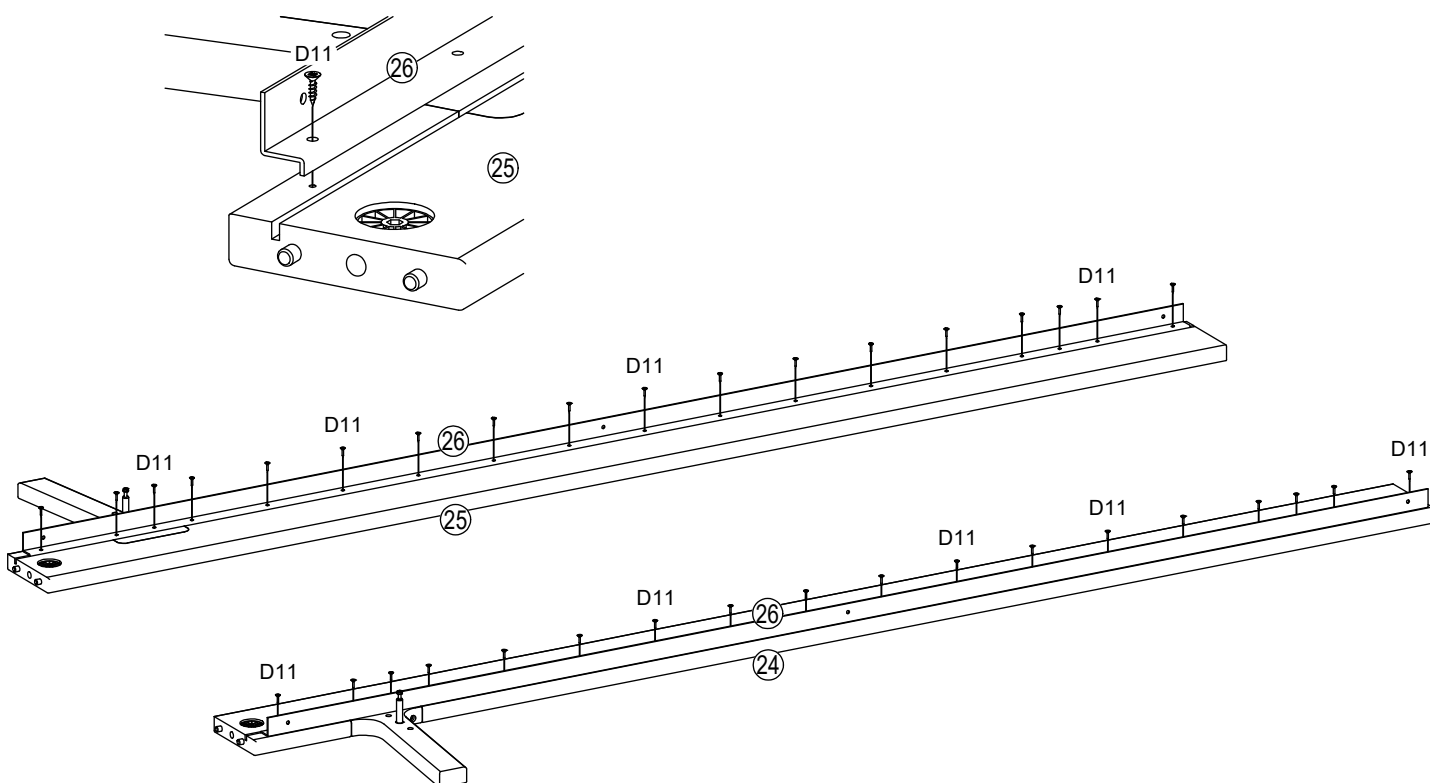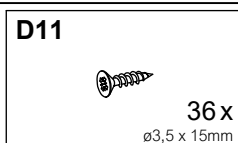




4

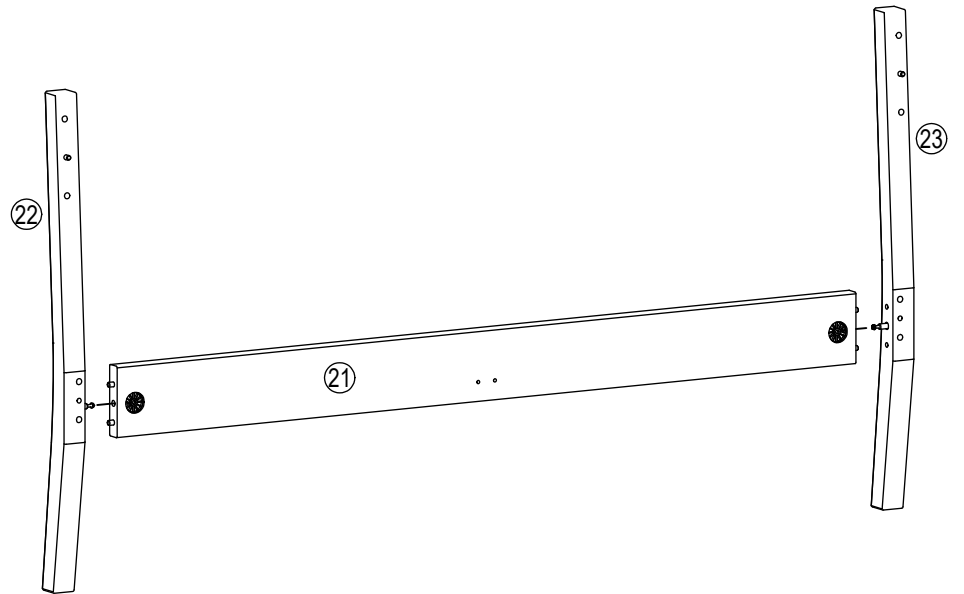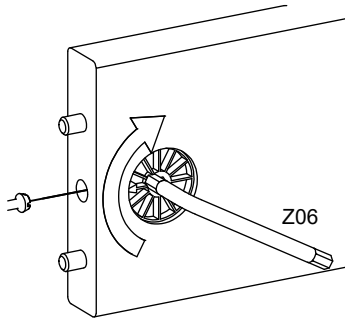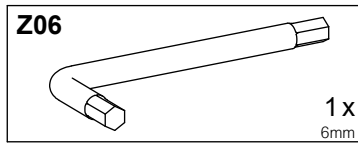





5

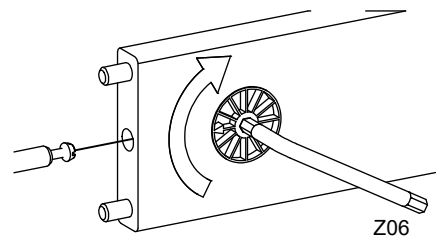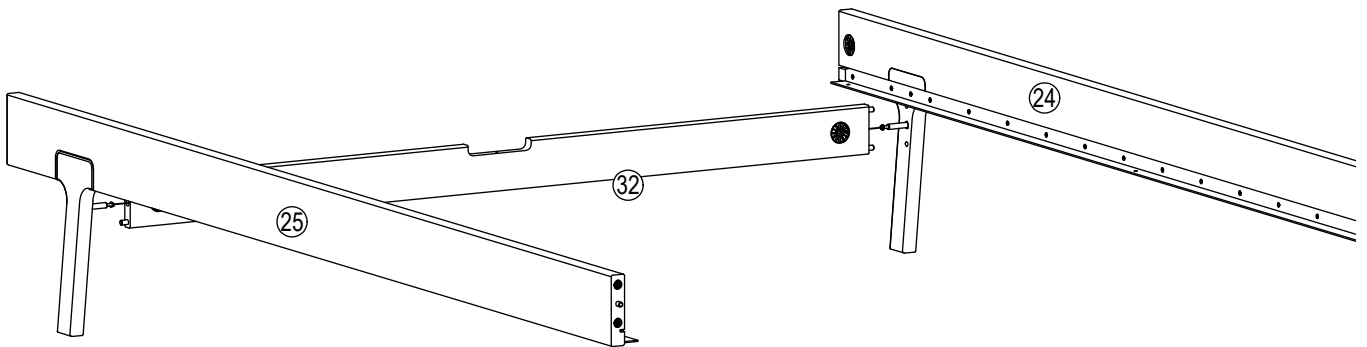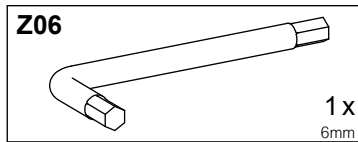



6

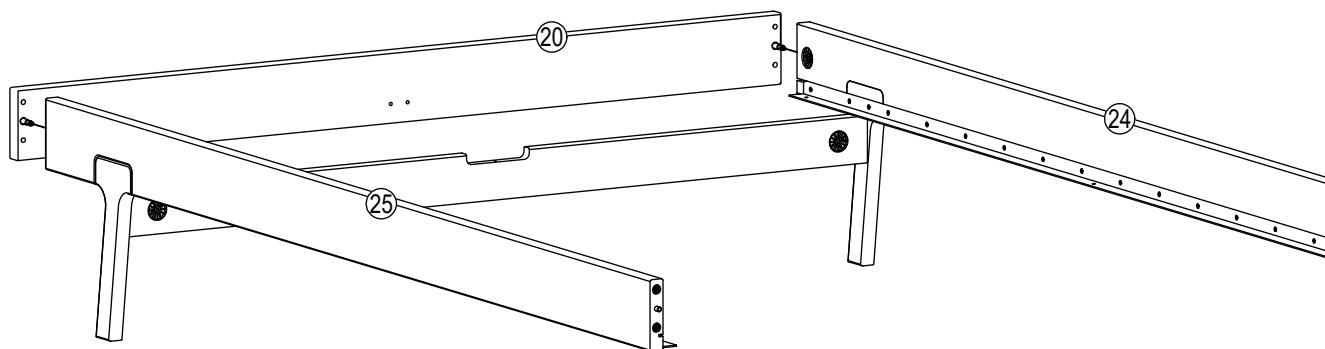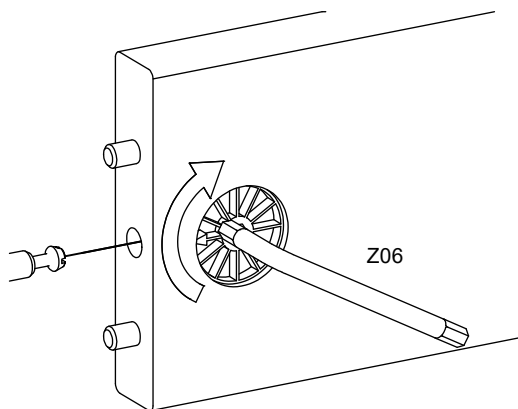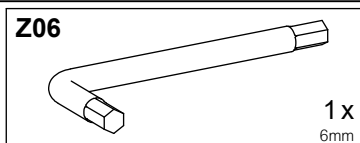



7

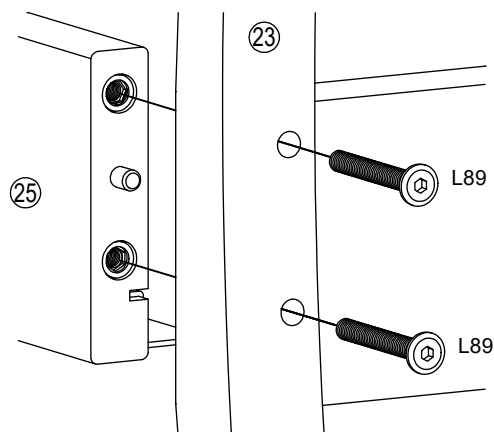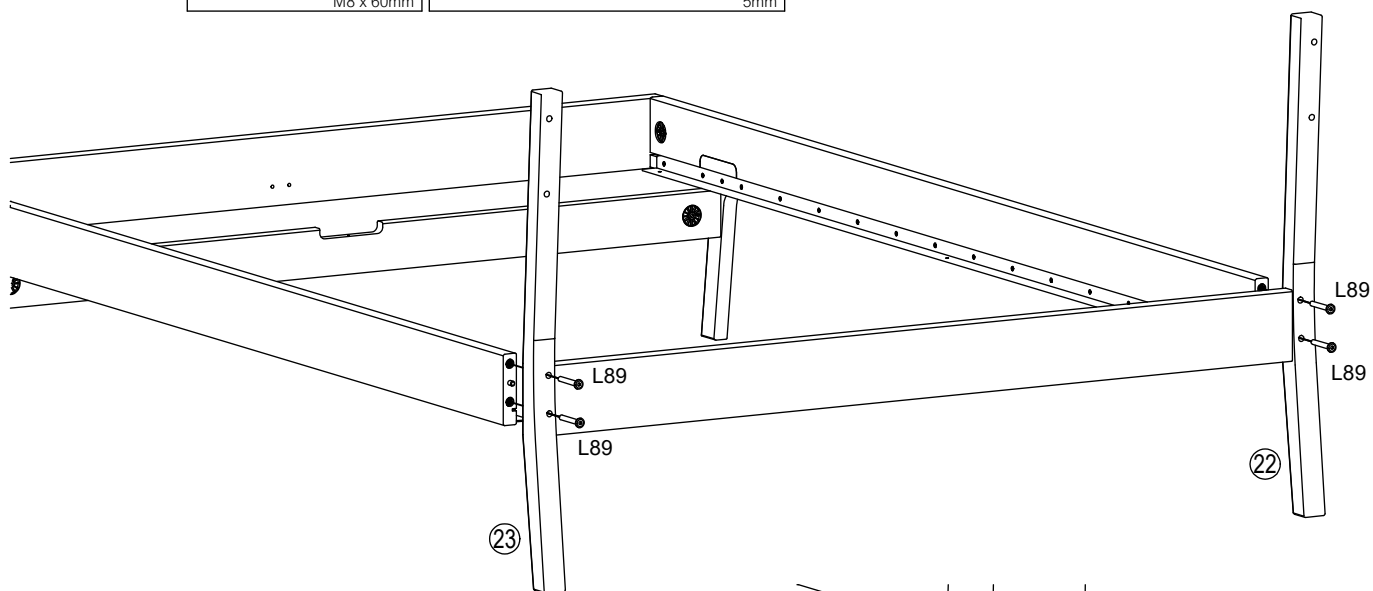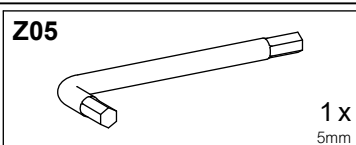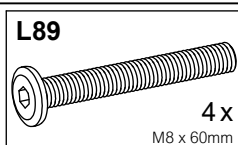

8

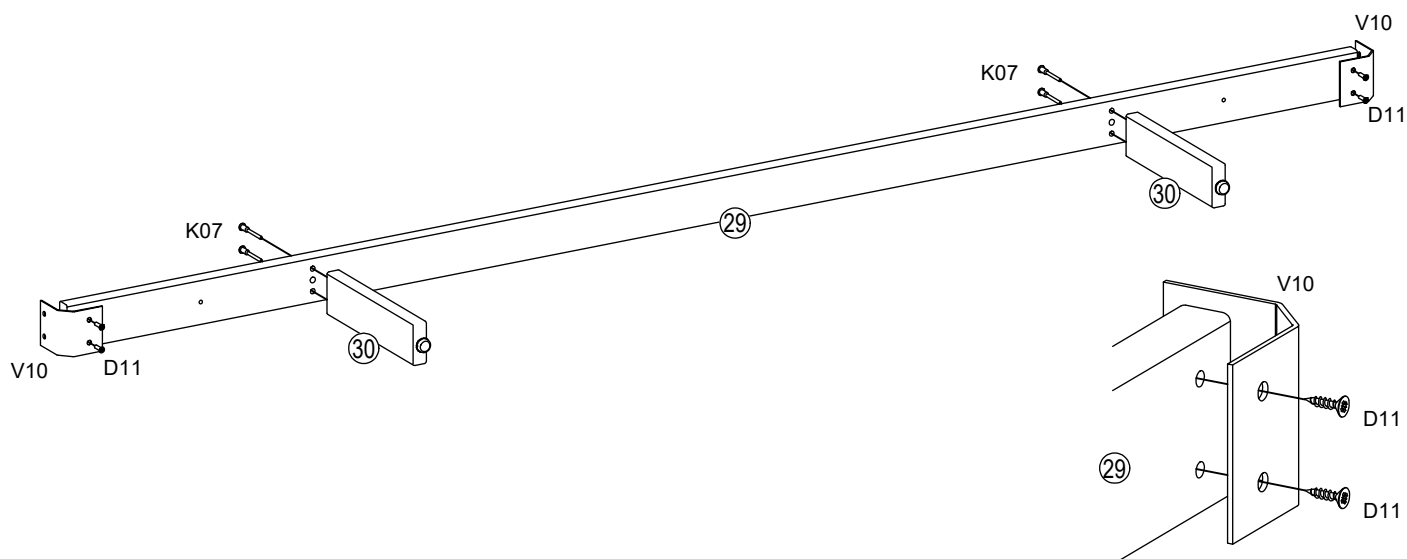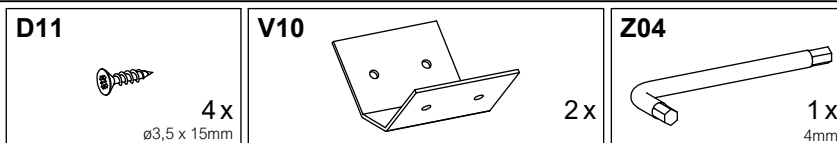

9

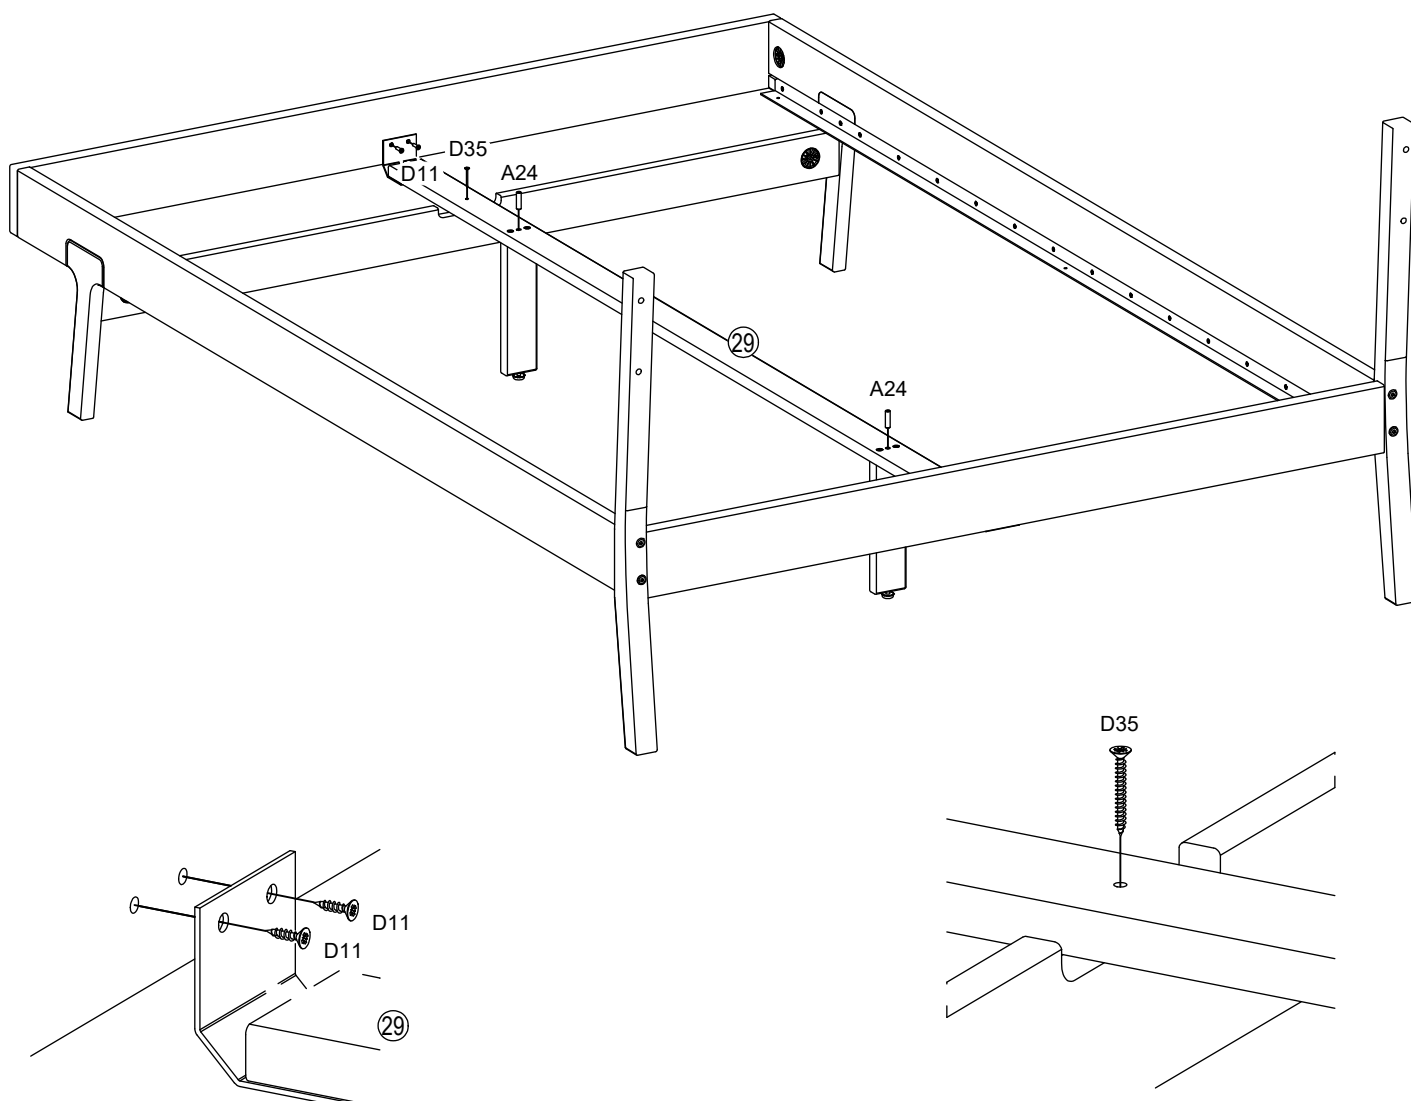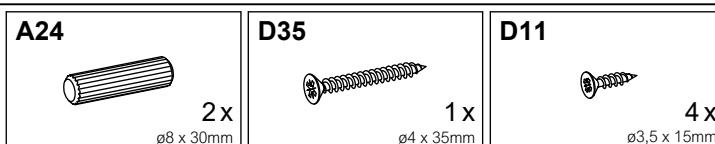

10

