

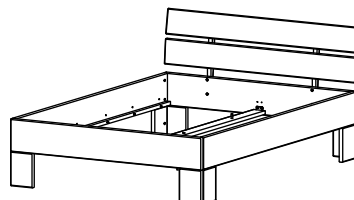
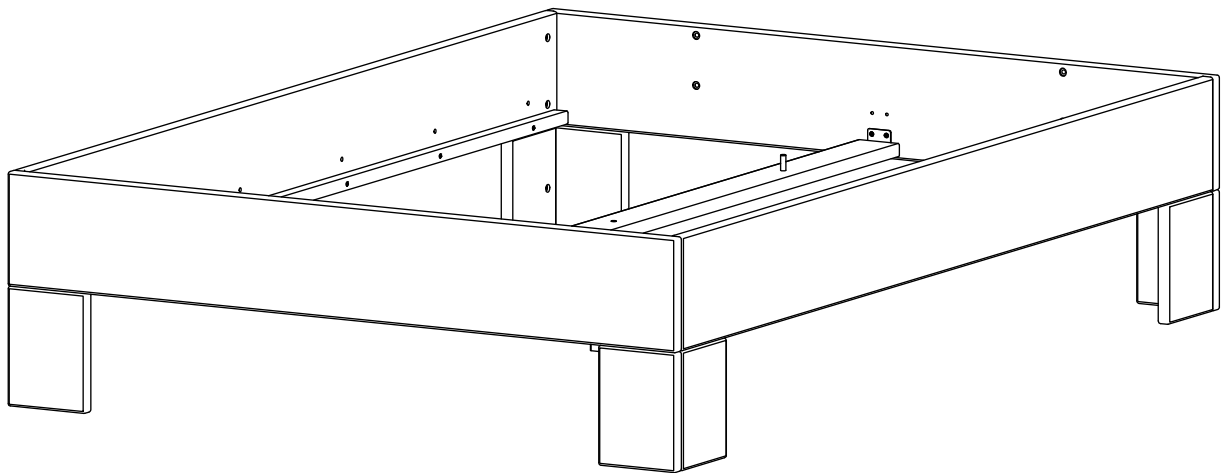
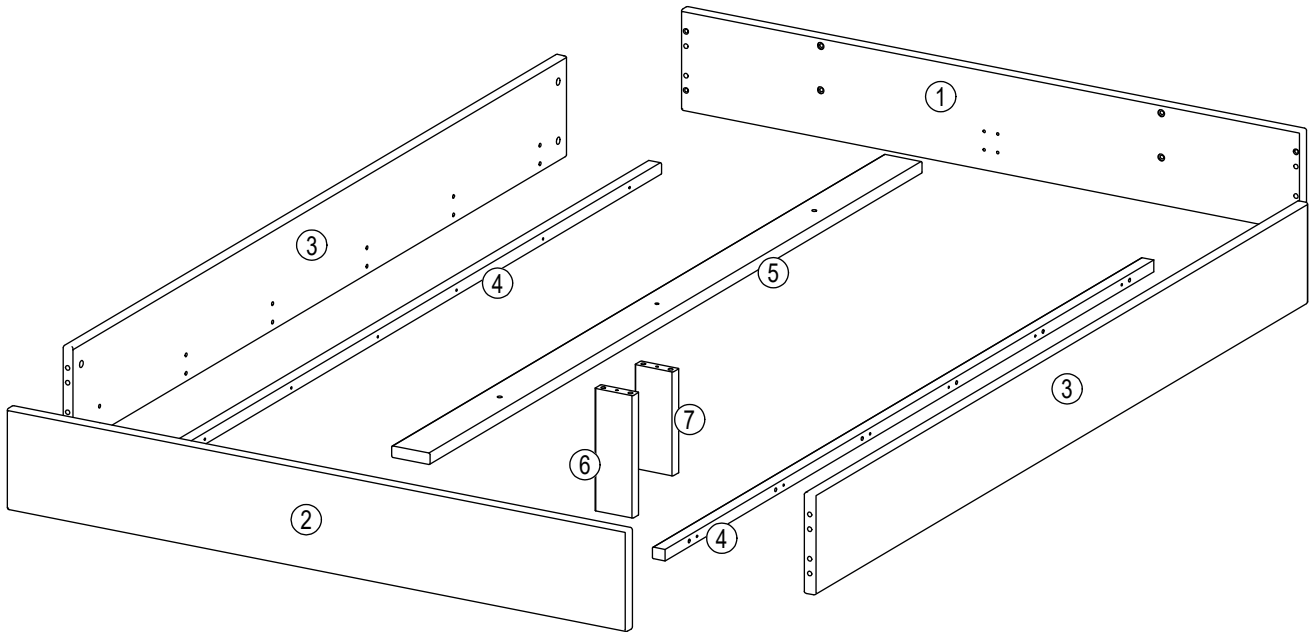



Aufbauanleitung Massivholzbett "Loano" ab 140 cm Breite
Instructions de montage lit en bois massif « Loano » à partir de 140 cm de largeur
Montagehandleiding massief houten bed "Loano" vanaf 140 cm breed


140 x 200 / 220cm
160 x 200 / 220cm
180 x 200 / 220cm
200 x 200 / 220cm




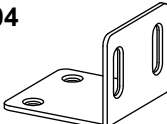



A24  12 x ø8 x 30mm	A45  12 x ø10 x 50mm	B01  8 x ø15 x 12,5mm	B14  8 x cc34, M6 x 7,8mm	
D37  12 x ø4 x 45mm	F66  8 x ø6,2 x 20mm	K11  1 x ø7 x 70mm	M21  1 x M6, ø8,8 x 13,5, ø14mm	Q52  1 x M6 x 22, ø19 x 6mm
V04  2 x 50 x 50 x 40 x 2mm	Z04  1 x 4mm			

901 121


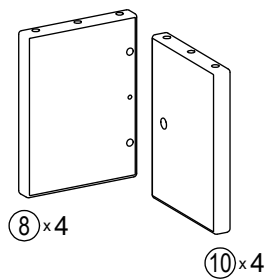


A45  32 x ø10 x 50mm	B01  4 x ø15 x 12,5mm	B10  4 x cc34, ø5 x 11mm
--	--	---



1

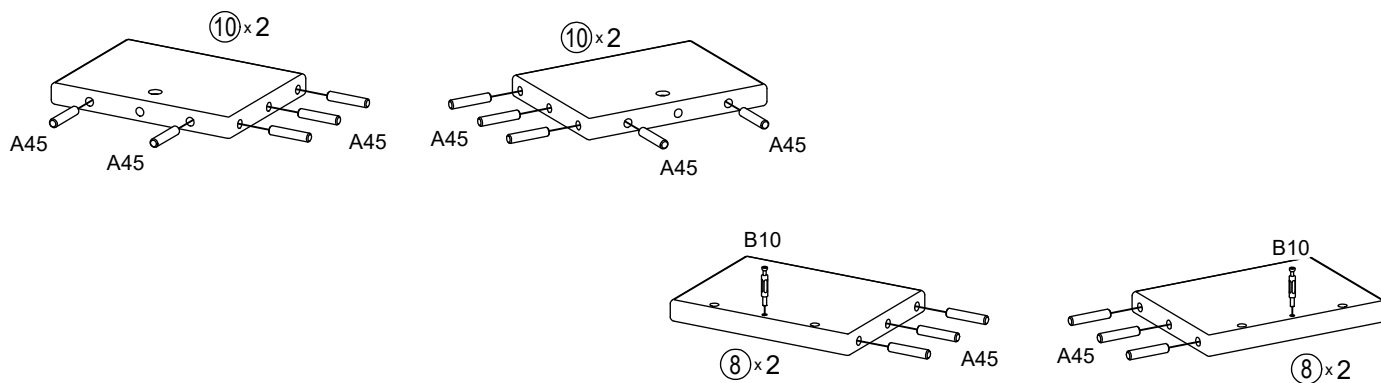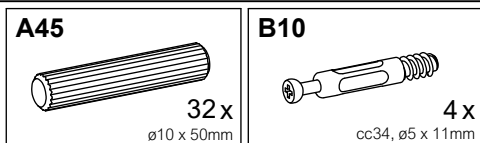



2

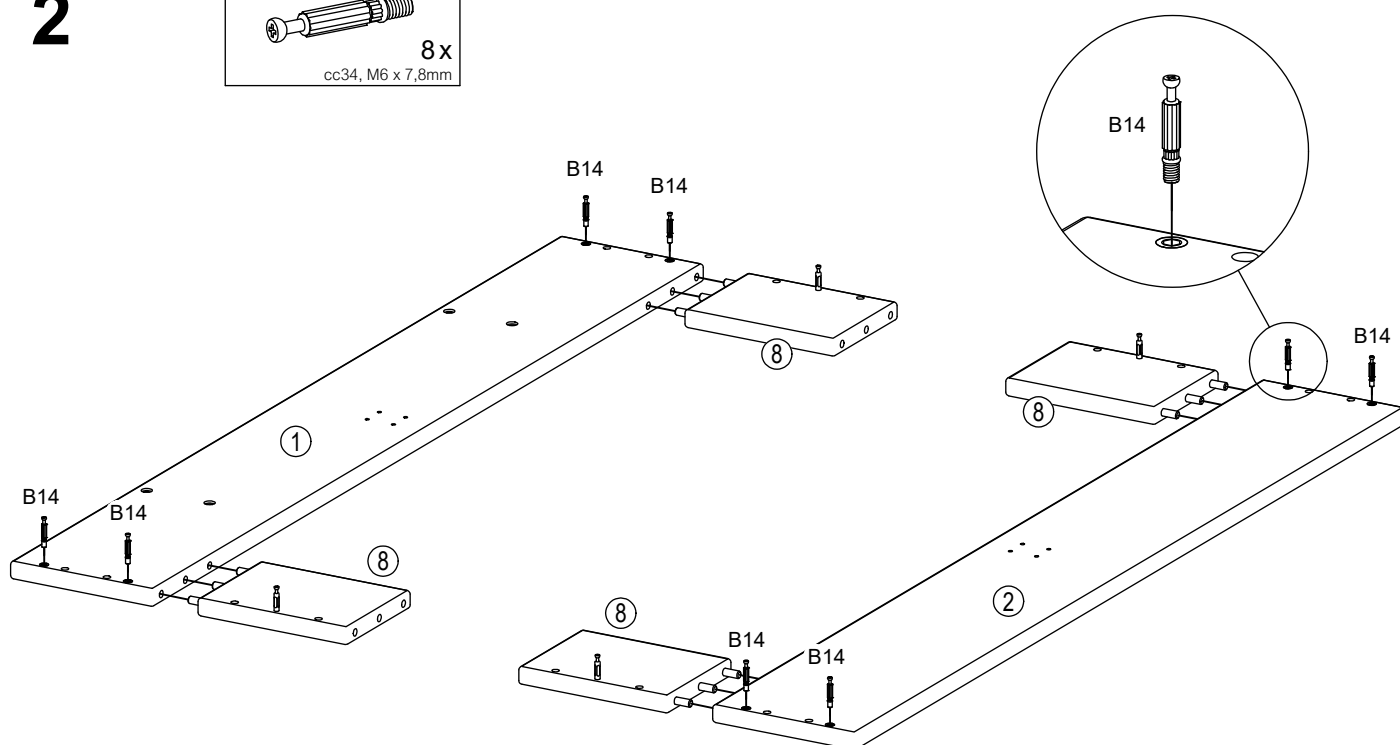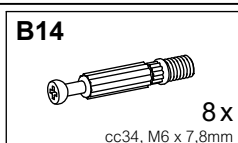



3

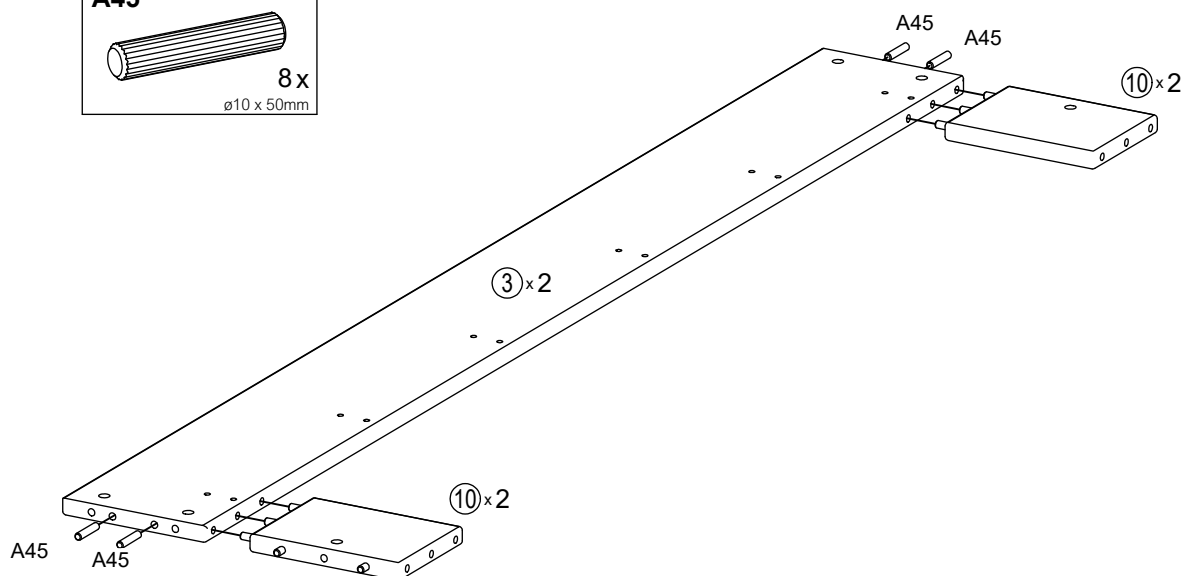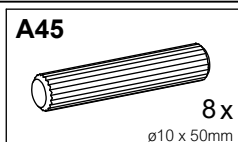



4

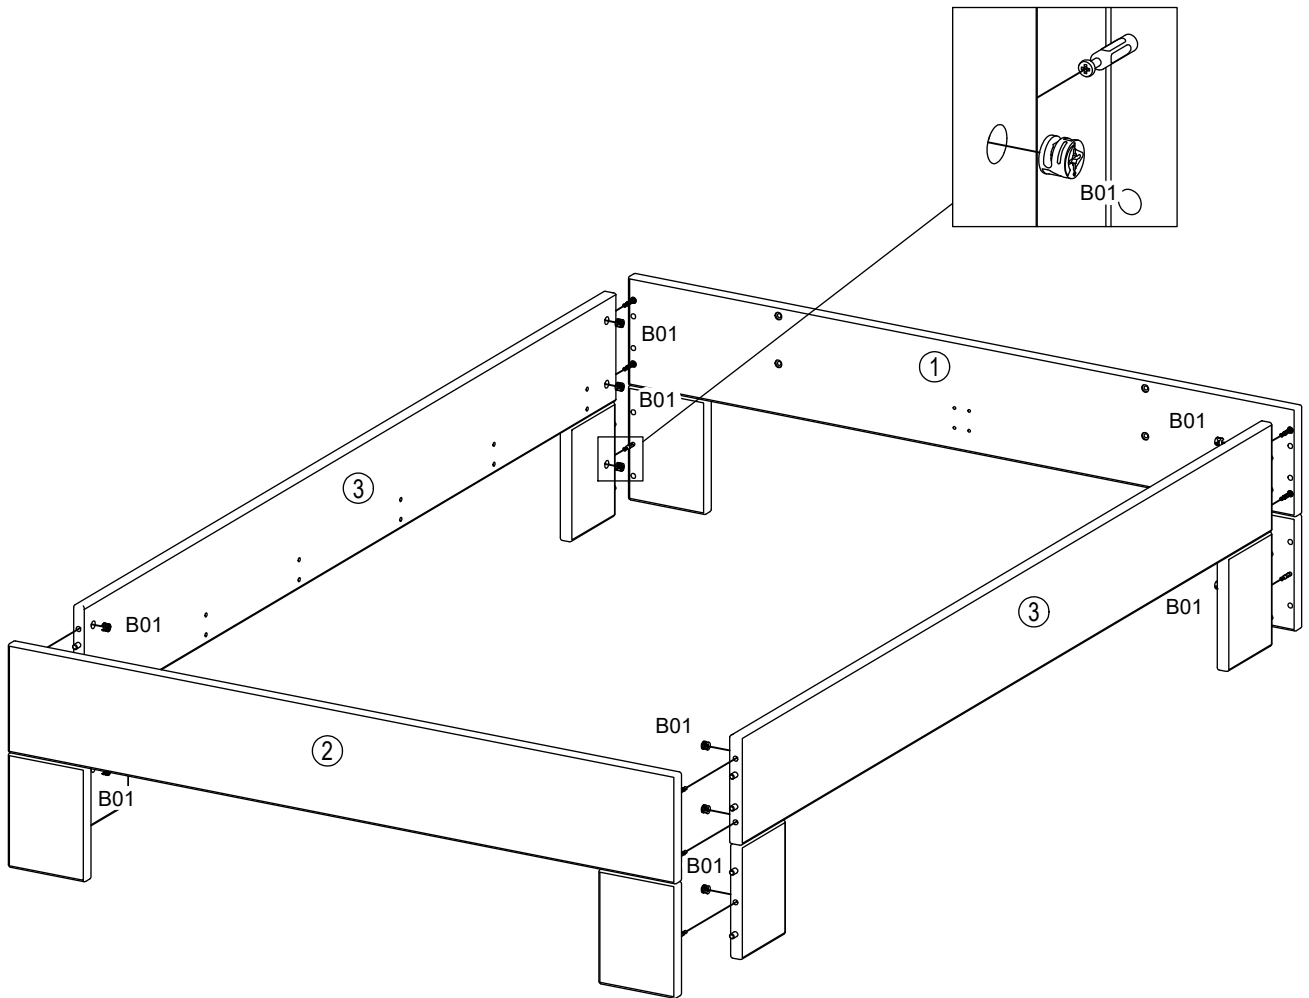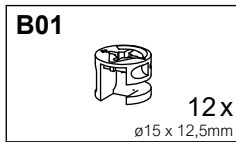


5

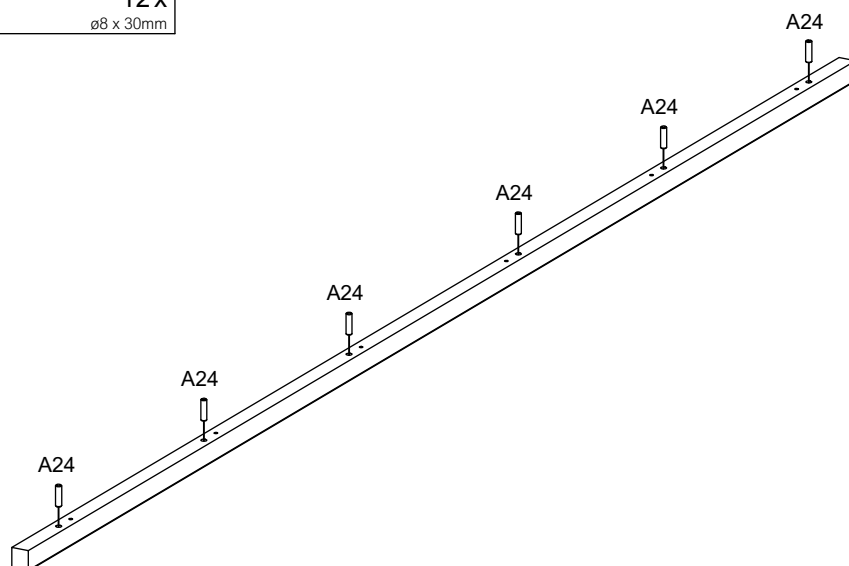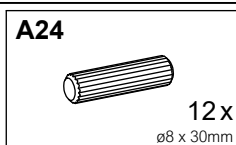


6

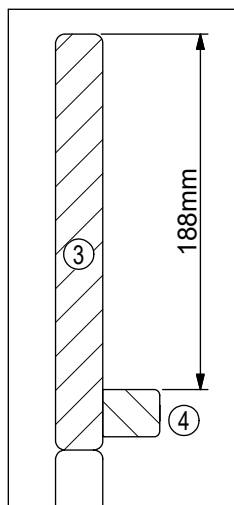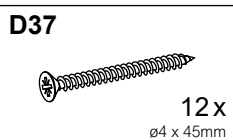


6A

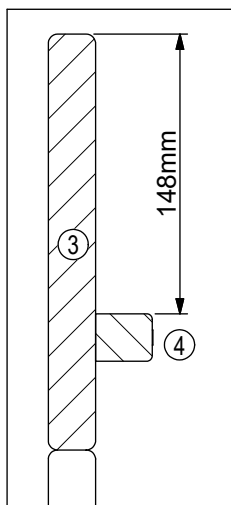


6B

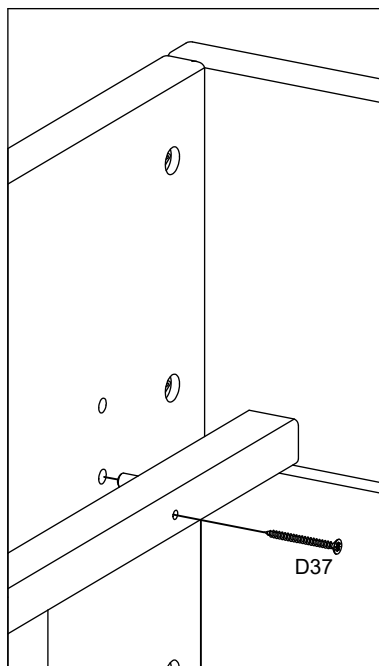




6A

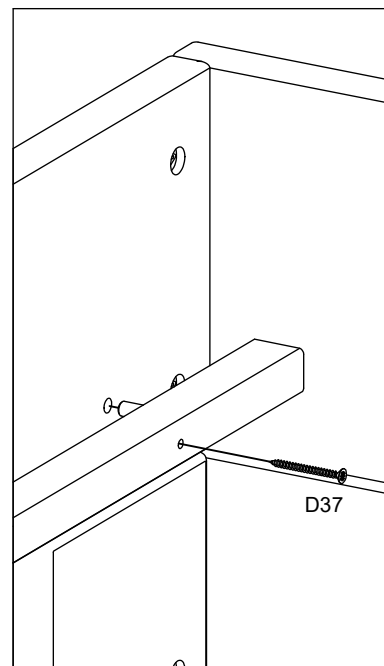


6B

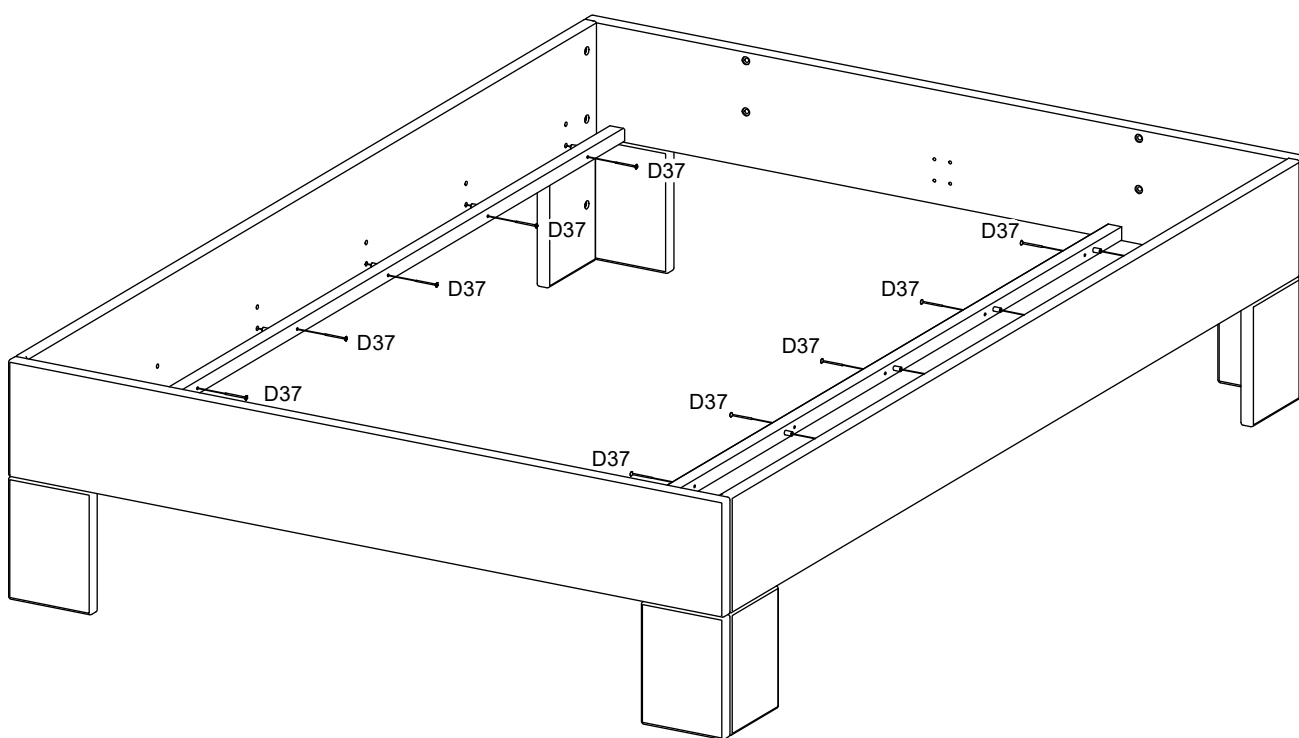


7

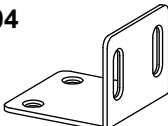
A45  2 x $\varnothing 10 \times 50\text{mm}$	F66  4 x $\varnothing 6,2 \times 20\text{mm}$	K11  1 x $\varnothing 7 \times 70\text{mm}$	M21  1 x M6, $\varnothing 8,8 \times 13,5$, $\varnothing 14\text{mm}$
Q52  1 x M6 x 22, $\varnothing 19 \times 6\text{mm}$	V04  2 x 50 x 50 x 40 x 2mm	Z04  1 x 4mm	

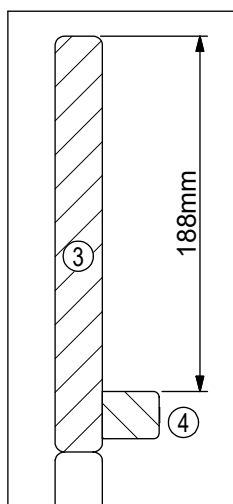


7A

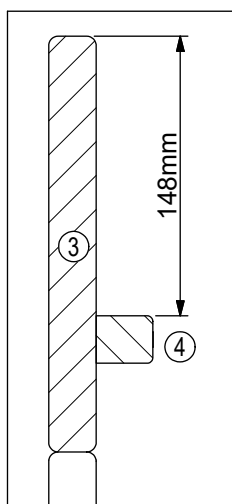



7B

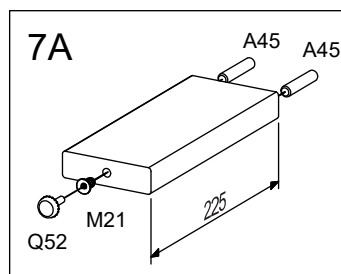

7A


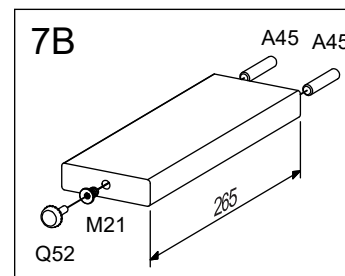


7B

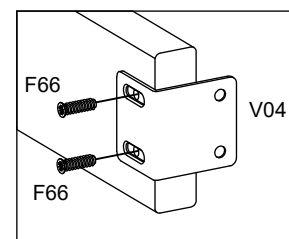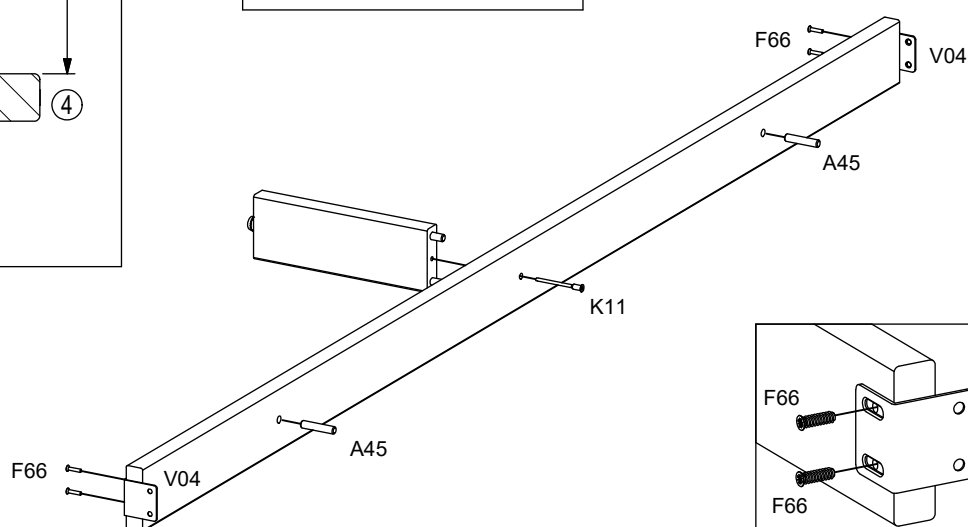


8



F66  4 x $\varnothing 6,2 \times 20\text{mm}$
--

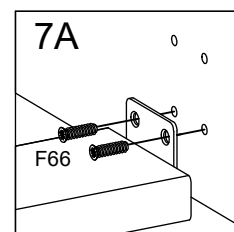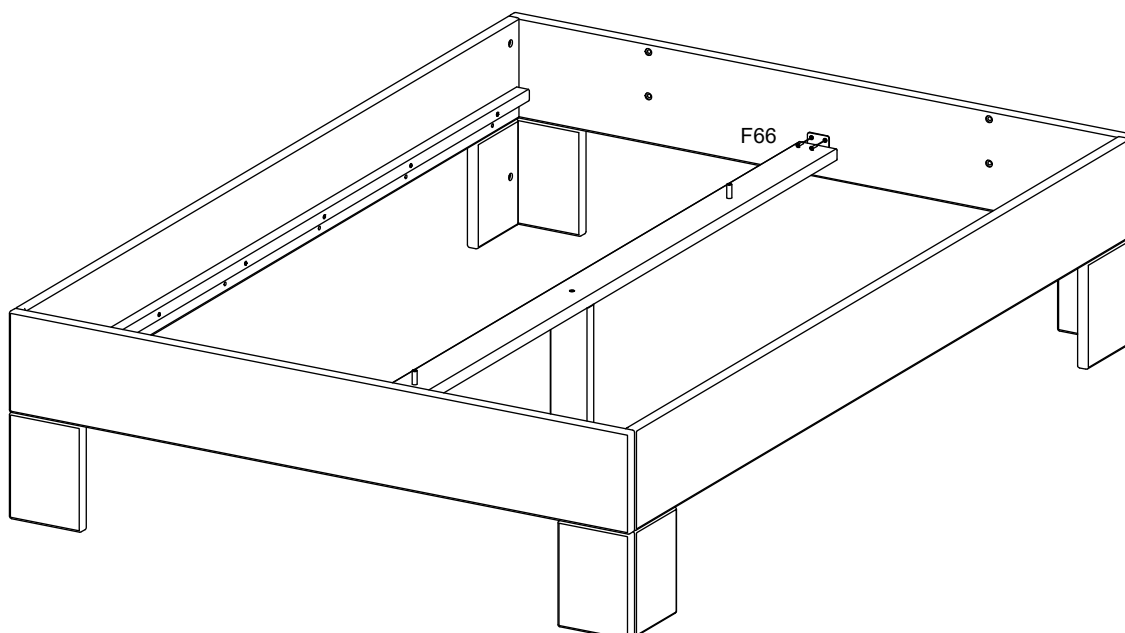




7A

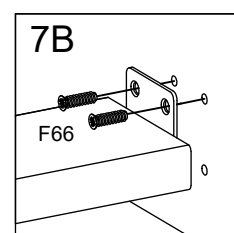



7B

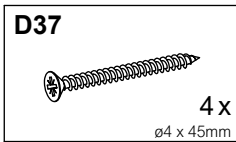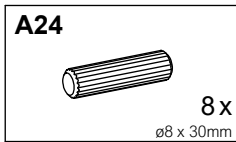



90cm
140cm
160cm
180cm
200cm

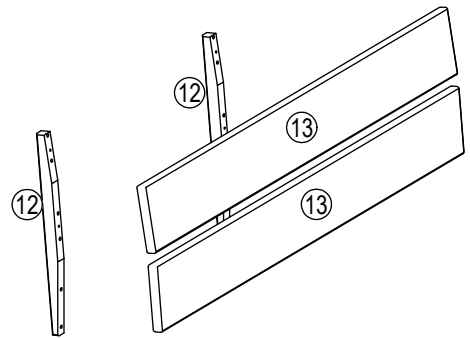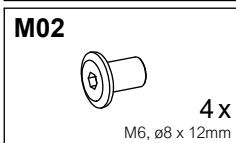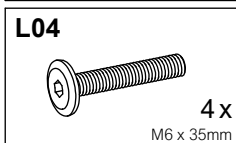

9

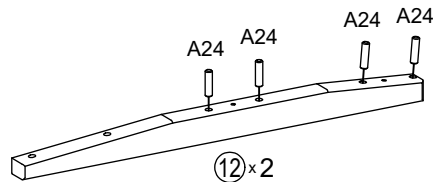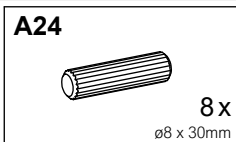

10

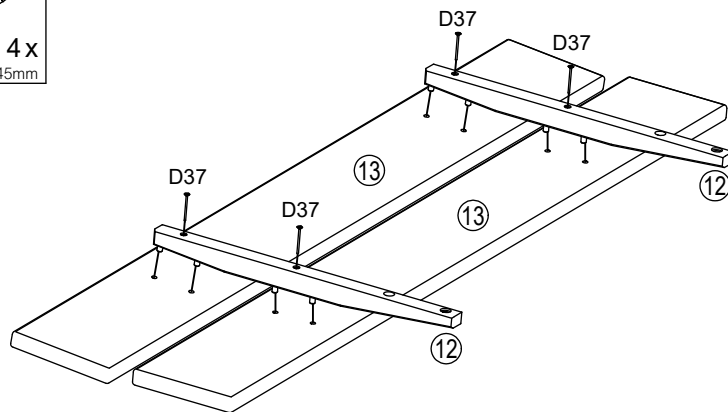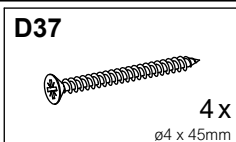

11

